
## User manual for BMS Upgrade V1.0.0

1. The upgrade tool is developed for the convenience of customer testing our BMS products for function update and is not for commercial use. When upgrading, first make sure the BMS product is in standby state. Please turn off the electric load and charger.

## 2. Operation steps and instructions


**Step 1.** Double click the application icon (BMS Upgrade V1.0.0.exe), Open the upgrade tool. The specific interface is as follows:

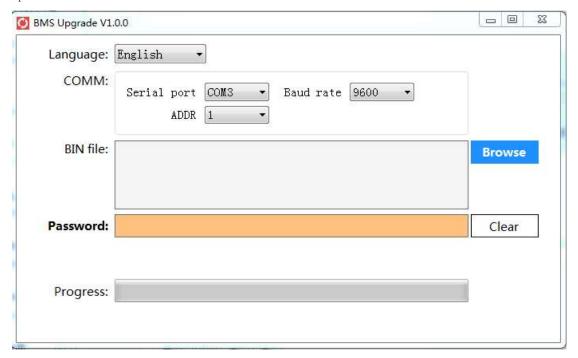


**Step 2.** Select the correct serial port and baud rate, click "Browse" to select the corresponding bin file. After importing the bin file, select the correct address. If you are prompted that the bin file is wrong, please confirm whether the bin file selection is correct, or contact the provider to obtain the correct bin file.

MS Upgrade V1	.0.0	
Language:	English ▼	
COMM:	Serial port COM3 ▼ Baud rate 9600 ▼  ADDR 0 ▼	
BIN file:	E:\C-3\PACE-IAP V1.03\P9316V100-20191104.bin	Browse
Password:		Clear
	Upgrade file loaded	
Progress:		

**Step 3.** Enter the correct password (password 541800). Click the "Upgrade" button to upgrade. After opening the upgrade tool, the first upgrade will prompt "The upgrade is ready. Are you sure you want to upgrade?", click "OK" to continue the upgrade, and there will be no prompt after that; click "Cancel" to exit the upgrade.

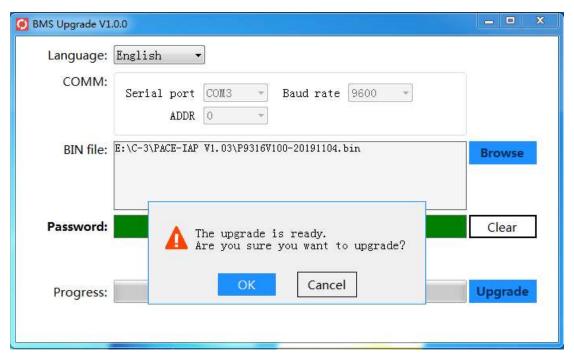

Click "OK" to enter the normal upgrade process. Please make sure the upgrade is completed.

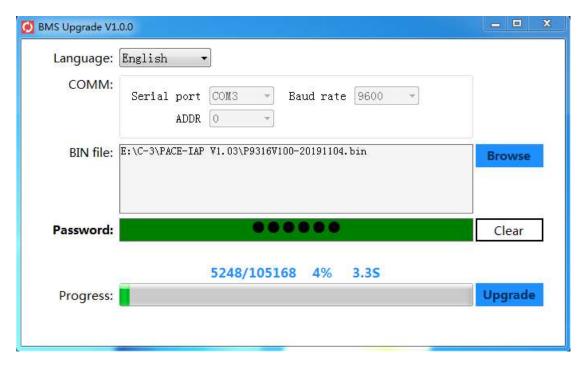

## 3. Error handling

- 3.1 if the bin file is wrong, please confirm whether the bin file selection is correct or contact the provider to obtain the correct bin file.
- 3.2 prompt response timeout, please check whether the communication line is connected well or whether the contact is good.
- 3.3 in case of any failure in the upgrade process, the upgrade must be repeated until it is successful. If the upgrade has not been successful, please contact our technical department.