

Upgrade BMU user guide

1. Upgrade BMU board with 485 serial port

1> Open the software

Open the HV-Energy Storage Systems V1.1.44, set up COM and select the upgrade window.

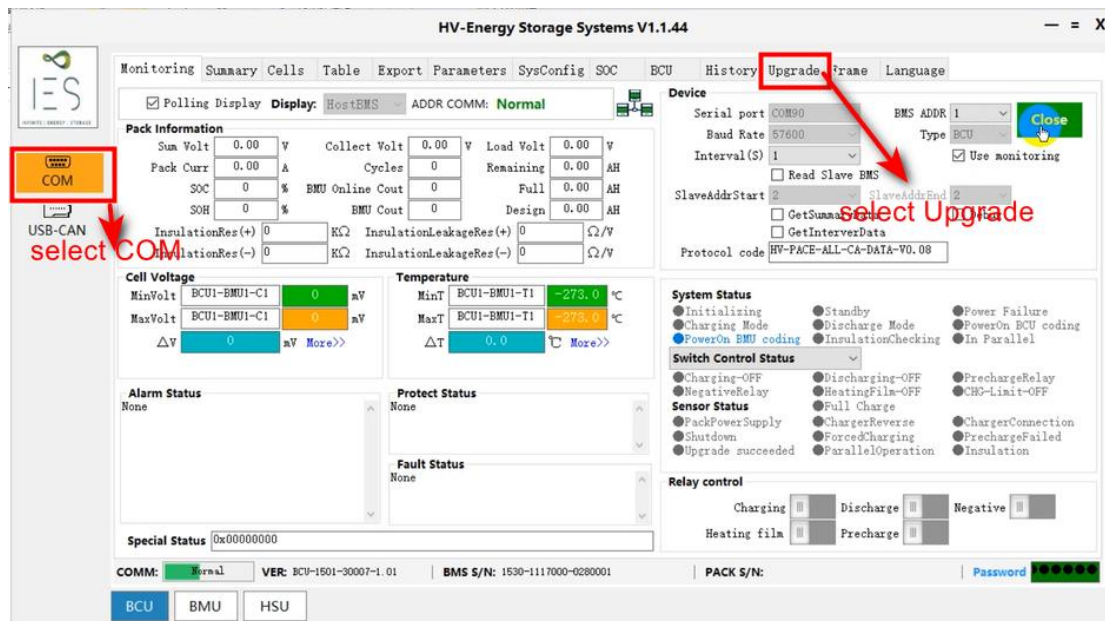


图 1

2> Set serial port and BMU

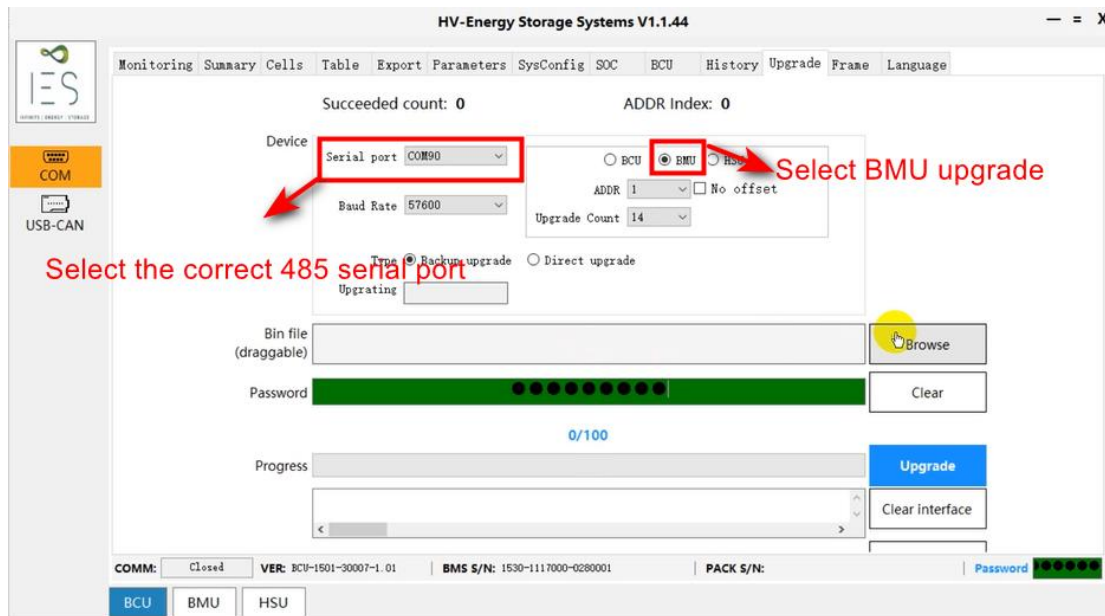


图 2

3> Set baud rate, device address and upgrade number.

Note: When upgrading multiple slave boards, each slave board communication line needs to be connected, and the motherboard can read the online number of all upgraded slave boards.

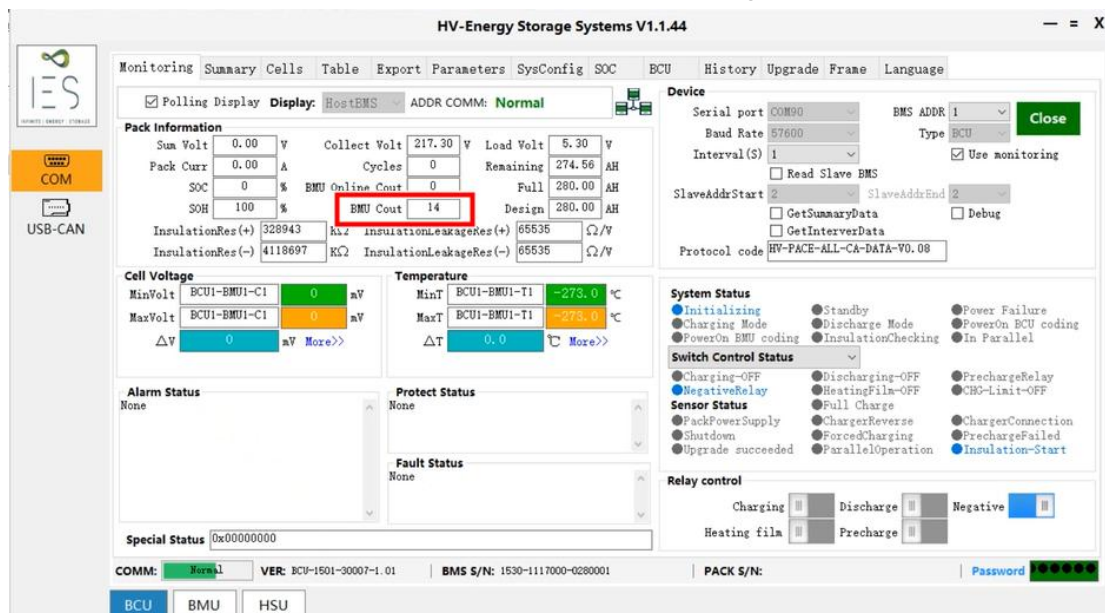


图 3

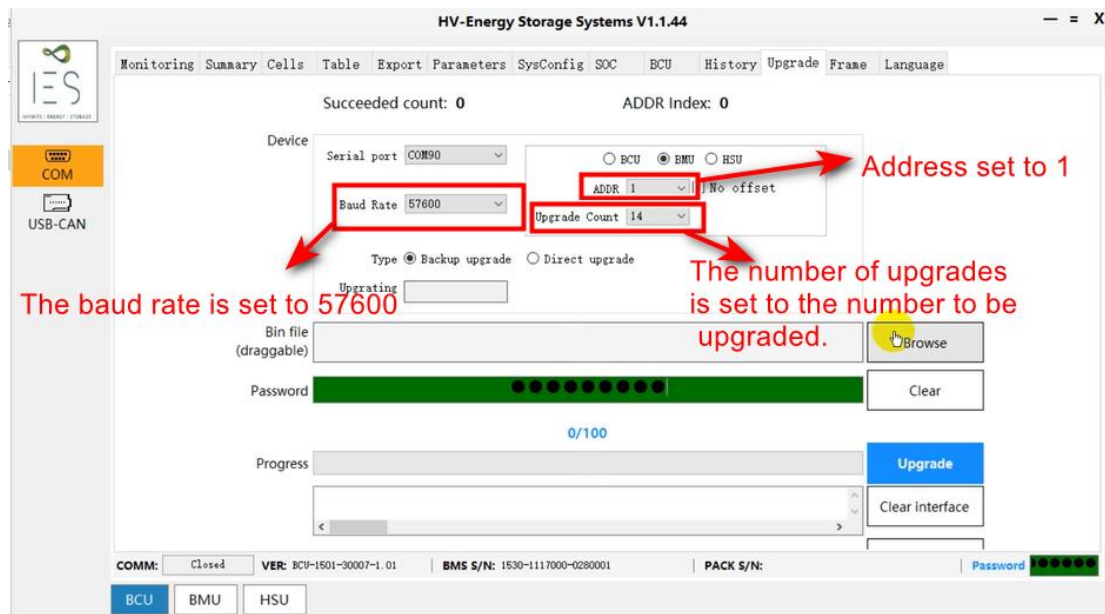


图 4

4> Load upgrade file, set password and Click the upgrade button.

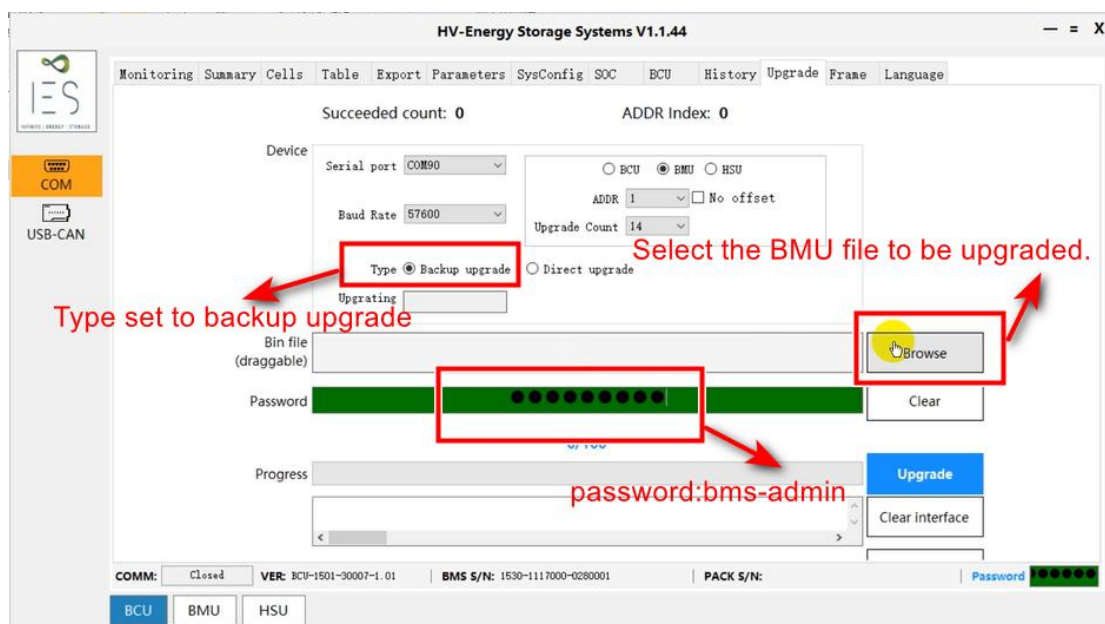


图 5

5> During the upgrade process

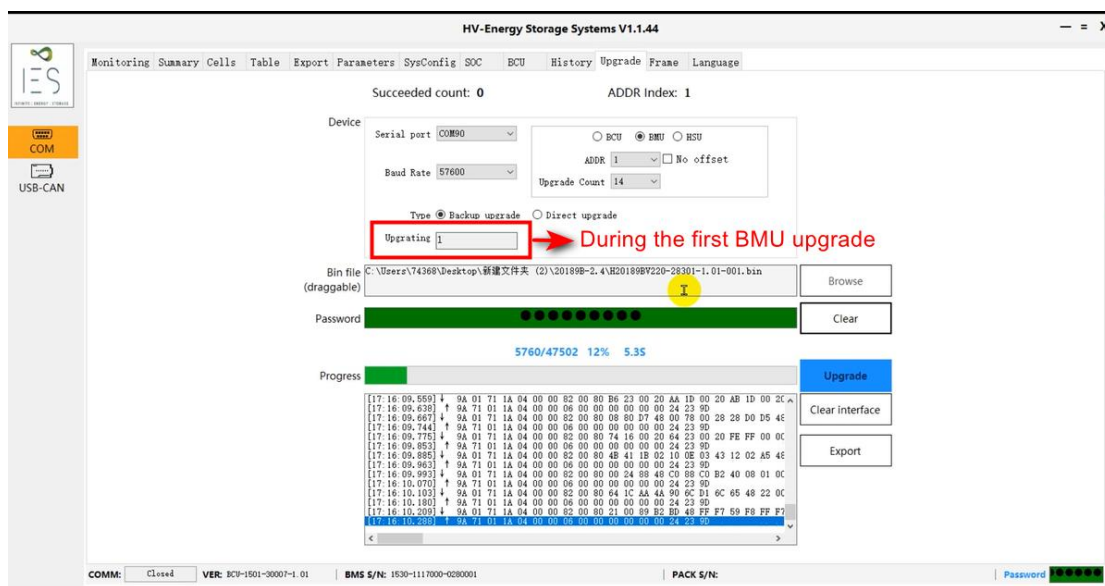


图 6

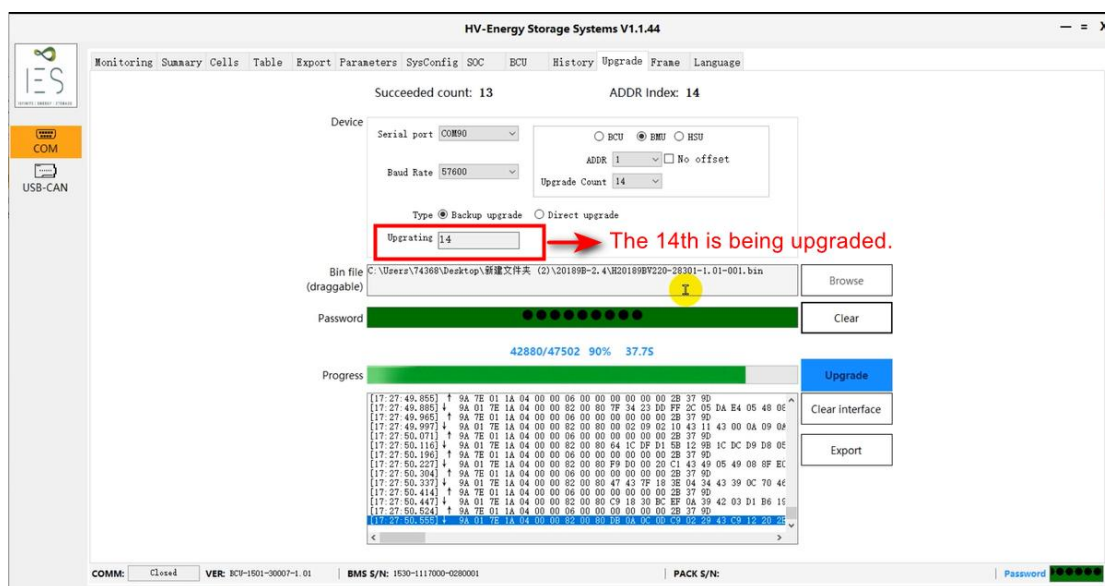


图 7

6> Upgrade success prompt

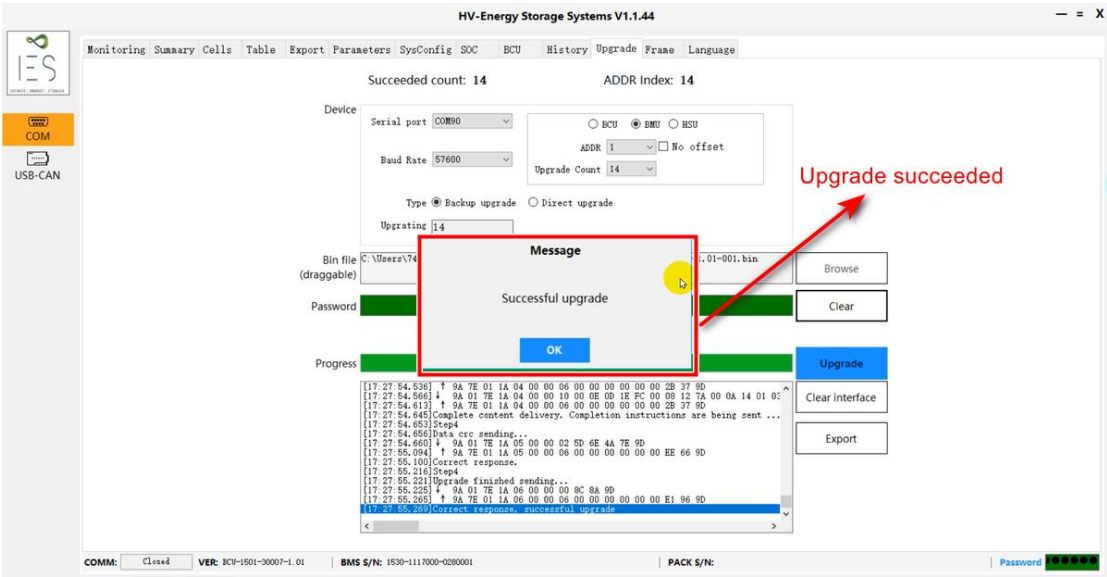


图 8